



**POWERHOLD**

# MULTIPURPOSE FLOORING ADHESIVE

**Multi Adhesivo de Solado de Propósito**

## DESCRIPTION:

POWERHOLD 2000 MULTIPURPOSE FLOORING ADHESIVE is a latex-based economy grade floor covering adhesive developed for the installation of many types of carpets and sheet goods designed for direct glue down excluding those with vinyl backings. POWERHOLD 2000 is freeze-thaw stable, easy to spread, and has ample open time, a strong wet tack, and a permanent water resistant bond. **DO NOT USE OUTDOORS.**

## FOR USE OVER:

Use over association grade particleboard, plywood, and above, on, or below grade porous concrete in the absence of hydrostatic pressure, excessive moisture or alkalinity. The pH level of concrete must be between 5 and 9 (do not install if over 9) and moisture level of concrete must be below 5 lbs./1000 sq. ft./24 hours using an anhydrous calcium chloride test kit according to ASTM F-1869 test method.

## PRIOR TO INSTALLATION:

Floor must be clean, level and dry. Remove all foreign substances such as wax, grease, dirt and any substance or chemical that would interfere with a good bond. Fill all holes and cracks with a cement based patching compound. Sand high spots. Install felt or hardboard underlayment over tongue and groove flooring to eliminate the possibility of telegraphing.

## INSTALLATION INSTRUCTIONS:

For the best results, the adhesive, substrate, and floor covering should be acclimated to acceptable temperature and humidity for a minimum of 48 hours before, during, and after the installation. Temperature should be between 65°F and 95°F and humidity should not exceed 65%

**MOST CARPET AND OTHER POROUS SURFACES:** Apply adhesive to substrate with the recommended trowel (see below). POWERHOLD cannot know all job conditions, therefore, it is the user's responsibility to use an adequate amount of adhesive for the job condition. The carpet should be installed in most cases with-

in 30 minutes after the adhesive application ("tacky" method). Work out all bubbles or ripples with a push broom or carpet tube. Approximately 30 minutes after the installation the carpet should be rolled with a 30-50 lb. (13.6-22.7 kg) carpet roller. Do not use a heavy linoleum roller.


**SHEET GOODS:** Apply the adhesive using a 1/16"x1/16"x1/16" square-notch trowel. The sheet goods should be installed within 20 minutes after the application of the adhesive. After installation of the sheet goods, the floor should be rolled with a 75-100 lb. (34-45 kg) linoleum roller.

**Clean-Up:** Use soap and water while wet. If dried use POWERHOLD Cleaning Solvent.

## CAUTION:

**DO NOT** take internally. If swallowed, **DO NOT** induce vomiting. Call a physician immediately. **KEEP OUT OF REACH OF CHILDREN.**

**POWERHOLD**

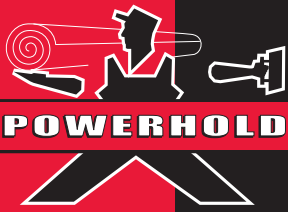

# 2000

## TECHNICAL SPECIFICATIONS

For Product No.: .....2000  
Powerhold Trade Name: ..... Multi Purpose Flooring Adhesive  
VOC's: ..... Negligible  
Base: ..... Synthetic rubber, resin blend  
Color: ..... Beige  
Consistency: ..... Smooth Medium Viscosity Paste  
Open Time: ..... 15-60 minutes under normal conditions  
Flammability: ..... Non Flammable  
Freeze Thaw Stability: ..... Stable  
Clean Up -  
When Adesive is wet: ..... Warm Soapy Water  
When Adesive is dry: ..... Powerhold 50 Cleaning Solvent

## PACKAGING

4 Gallon (15.14L) and 1 Gallon (3.785L) Black Plastic Pails

## SHELF LIFE

1 - Year when stored in original, unopened container

## COVERAGES (APPROXIMATE)



Up to 250 sq. ft./gal  
Up to 6.1 sq. meters/liter  
1.6mm x 1.6mm x 1.6mm  
• Sheet goods



Up to 72 sq. ft./gal.  
Up to 1.8 sq. meters/liter  
3.2 mm x 3.2 mm x 1.6 mm  
• Rough backed and ribbed carpet



Up to 160 sq. ft./gal.  
Up to 4.0 sq. meters/liter  
2.4mm x 2.4mm x 2.4mm  
• Smooth backed carpets



Up to 110 sq. ft./gal.  
Up to 2.7 sq. meters/liter  
3.2 mm x 3.2 mm x 1.6 mm  
• ActionBac® / Jute, Urethane  
(attached cushion) & Hot Melt Backed Carpets  
[Most Backed Carpet]